


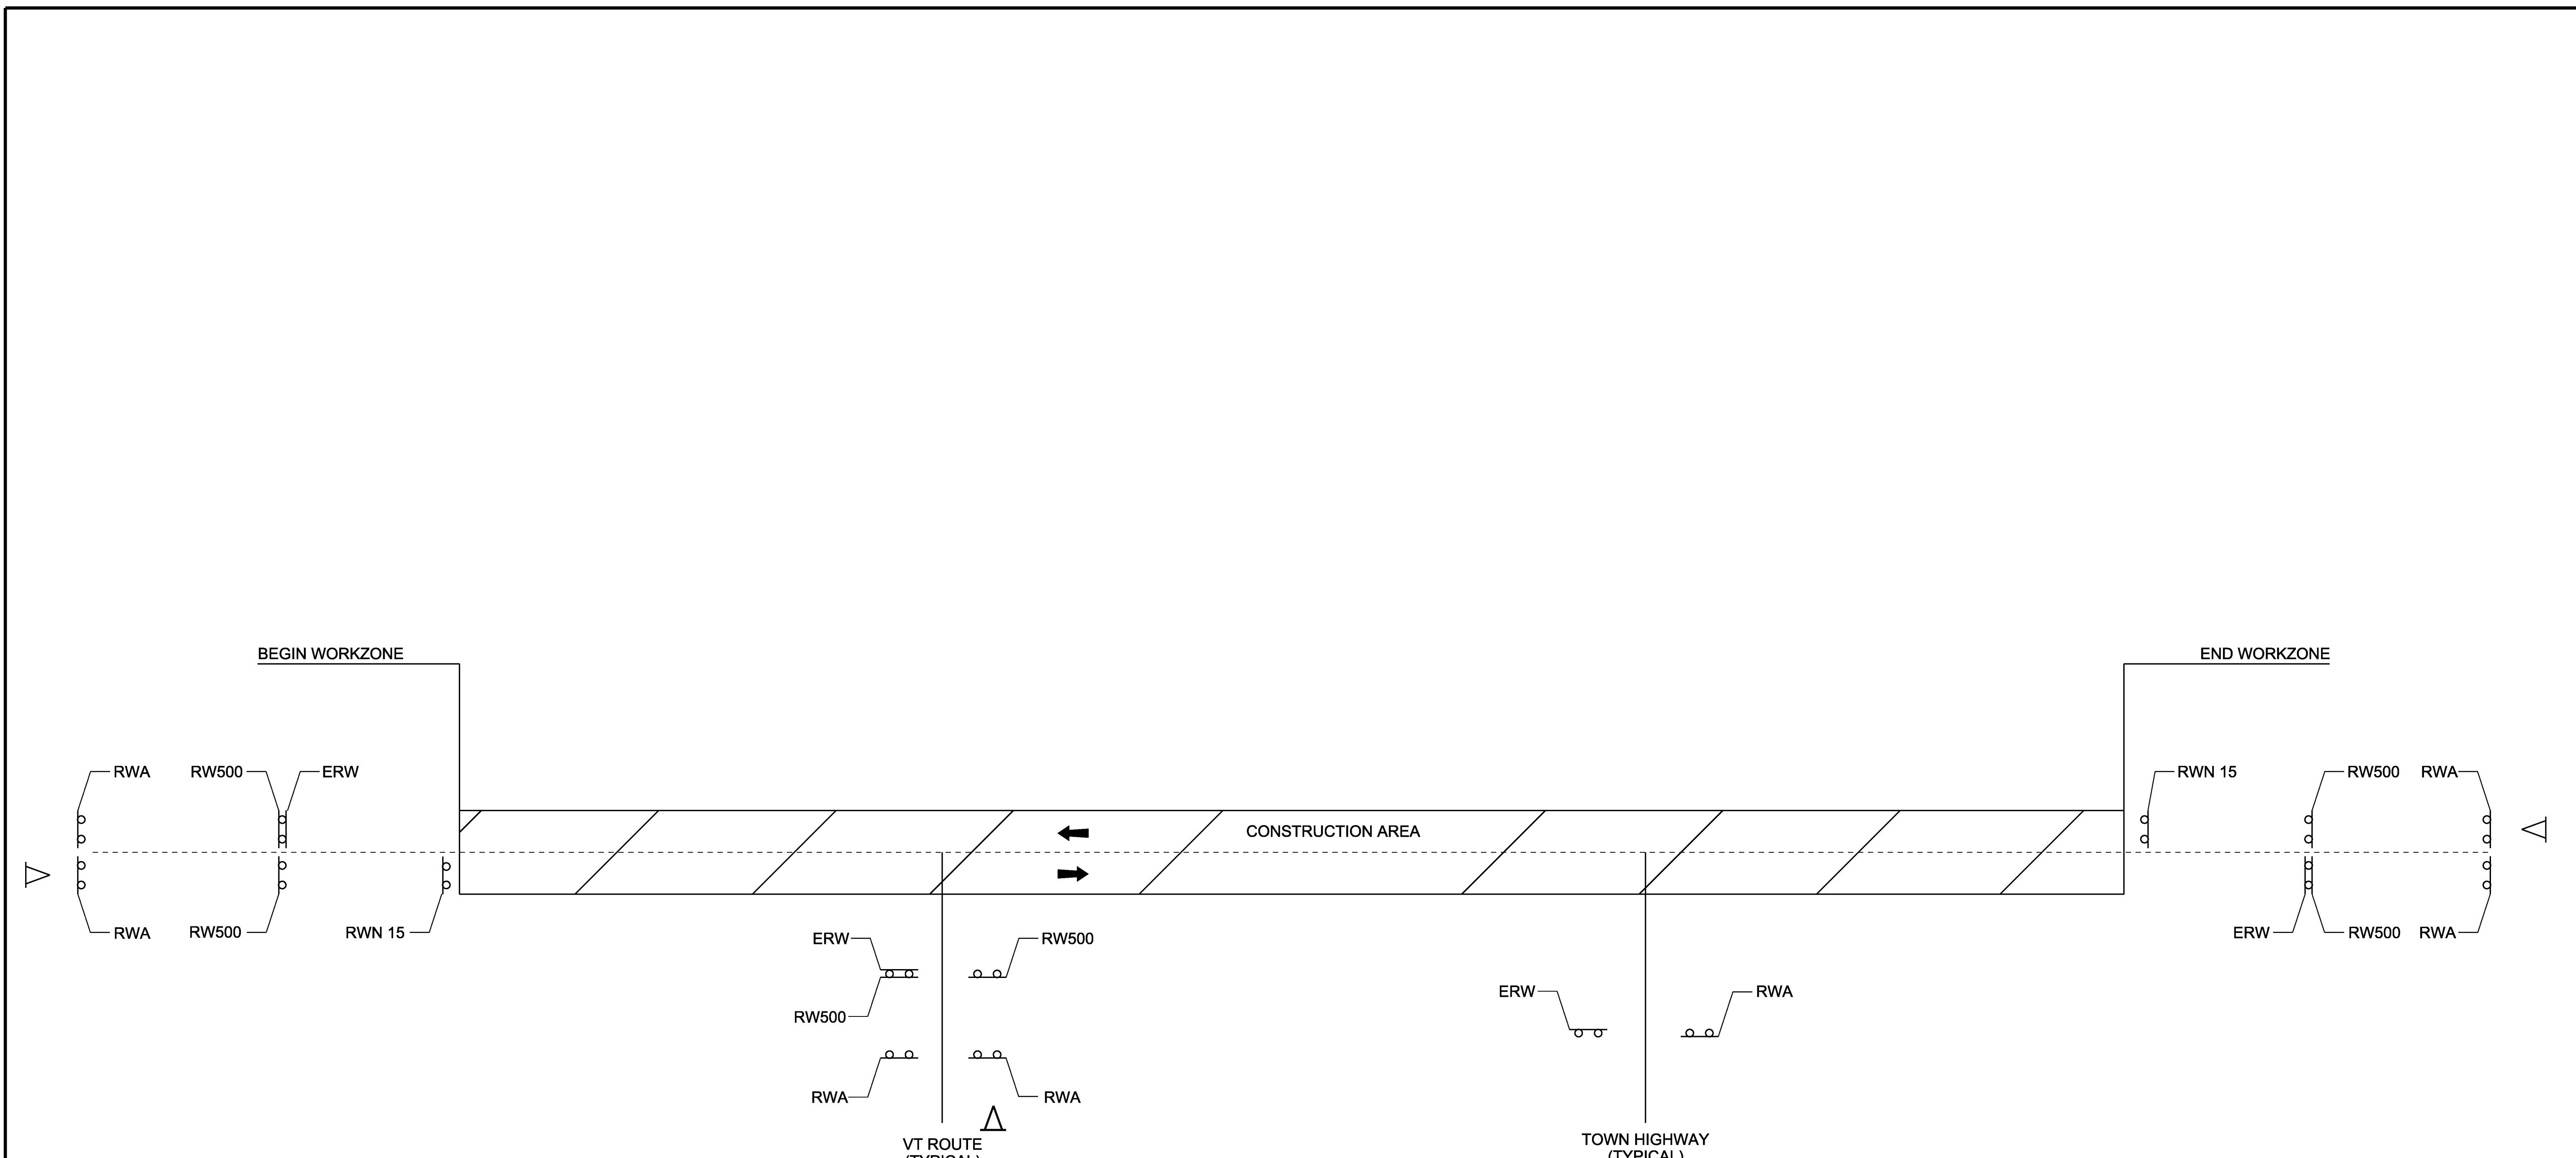


**TYPICAL CONSTRUCTION APPROACH SIGNING FOR
CONVENTIONAL TWO-WAY HIGHWAY**

LEGEND

- RWA = ROAD WORK AHEAD
- RW500 = ROAD WORK IN 500 FEET
- RWN = ROAD WORK NEXT (XX MILES)
- ERW = END ROAD WORK
- SRWA = SIDE ROAD WORK AHEAD
- SRW500 = SIDE ROAD WORK 500 FEET

 = PORTABLE CHANGEABLE MESSAGE SIGN

 = WORK AREA

 = DIRECTION OF TRAFFIC FLOW

NOTE:
SEE VAOT STANDARDS T-1, T-10, T-11 AND T-13 FOR SIGN PLACEMENT.
CONSTRUCTION APPROACH SIGNING SHALL BE PLACED AS NOT TO
INTERFERE WITH EXISTING TRAFFIC CONTROL DEVICES.
SEE CONSTRUCTION APPROACH SIGNING NOTES SHEET.

PROJECT NAME: WORCESTER-ELMORE
PROJECT NUMBER: STP 2954(I)

FILE NAME: pl4v23lwrk.dgn	PLOT DATE: 13-MAY-2016
PROJECT LEADER: J. HARRINGTON	DRAWN BY: B. KIPP
DESIGNED BY: B. KIPP	CHECKED BY: M. FOWLER
CONSTRUCTION APPROACH SIGNING SHEET	SHEET 33 OF 33